

## FORM

### WATERPROOF RECHARGEABLE VIBRATORS

FORM Vibrators are the most versatile products of their kind. Every surface is optimized for sensation and full-body contact, so each design offers multiple pleasurable possibilities. FORM Vibrators all feature Jimmyjane's proprietary Waterproof Recharging Technology, so that they are completely washable, bath-friendly, and will never need new batteries. Add in medical-grade materials and the most intense vibrations available, and you've got one hot package.

DUAL MOTORS, SEAMLESS CONSTRUCTION,  
PLATINUM SILICONE, CORDLESS CHARGING

 
#### Sexy is smart.

Jimmyjane is a design-centric brand founded on the belief that life is better with a sexy twist. We design products and experiences to provide pleasure, strengthen connection and create provocative possibility.

## FORM 2

### WATERPROOF RECHARGEABLE VIBRATOR

This compact design features two flexible vibrating ears that move independently and are internally powered for dynamic stimulation. Think of it as sensation in stereo.

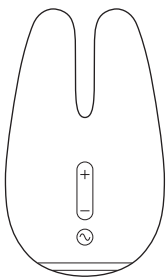


FORM 2 takes the traditional "Rabbit" concept to new heights. If desired, it can provide much more intensity, as the dual vibration sources are positioned at the tips of the ears – right where they come in contact with the body. Designed for external stimulation the flexible ears will flutter on either side of the clitoris (or any other pleasurable spot) and surround it in sensation. FORM 2 can also be used along and between the labia, and is excellent for use during couple's sex.

Get more information and see suggested uses at [WWW.JIMMYJANE.COM](http://WWW.JIMMYJANE.COM)

## FORM 3
 
### WATERPROOF RECHARGEABLE VIBRATOR

This unique design puts the pleasure of vibration at your fingertips. It features a flexible pad that curves to meet your body – press in the center, and the responsive silicone Touchpad yields, focusing the sensation exactly where you want it.

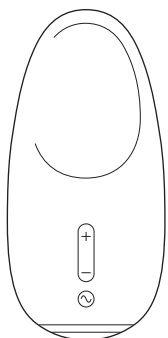


Use the soft silicone pad as a natural extension of the hand – enabling you to enjoy both vibration and manual stimulation. Designed for external stimulation, FORM 3 is excellent for caressing the clitoris, labia and other pleasurable areas. It is also intended for use during couple's sex, and can be placed or held between two bodies, expanding the sensations for both.

Get more information and see suggested uses at [WWW.JIMMYJANE.COM](http://WWW.JIMMYJANE.COM)

## FORM 4
 
### WATERPROOF RECHARGEABLE VIBRATOR

This design pairs exceptionally strong vibration with a unique, flexible body. It's firm, but with the right amount of give – just like a good partner.

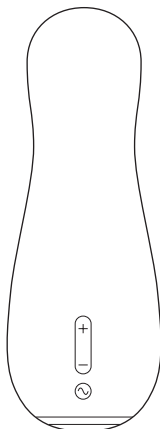


FORM 4 is the most powerful vibrator of its kind, with a versatile, elongated design for internal, G-spot and clitoral stimulation. When inserted, its flexible shape adapts to your body, yet it's firm enough to hit all the right spots. Best of all, we've put an oversized motor right in the tip, providing exceptional power exactly where you need it to take you over the top.

Get more information and see suggested uses at [WWW.JIMMYJANE.COM](http://WWW.JIMMYJANE.COM)

## FORM 6
 
### WATERPROOF RECHARGEABLE VIBRATOR

This powerful companion is the ultimate all-around vibrator. With two independently powered ends, continuous surfaces and optimal curvature, FORM 6 reaches everywhere you want.

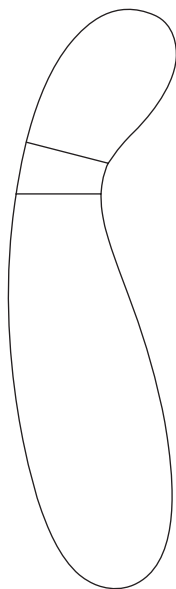


Dual motors and 360° versatility join forces to deliver any type of stimulation you desire – internal, G-spot, labial or clitoral. The six vibration modes integrate both motors to offer the harmonic sensations of your choice.

Get more information and see suggested uses at [WWW.JIMMYJANE.COM](http://WWW.JIMMYJANE.COM)

## FORM 5


 
### WATERPROOF RECHARGEABLE VIBRATOR

For her, for him, for us, FORM 5 takes pleasure to the third power. Two micro-thin, supple wings provide all-encompassing sensation, while the firm Pleasure Dome in the center features a motor right at its tip to deliver serious vibration where it matters most.

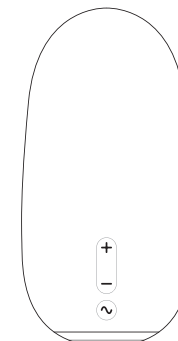


Its tulip shape is also a two-lipped shape, with a firm mound in the middle. It mirrors the female form to provide ultimate pleasure to both men and women. Spread her labia while the Pleasure Dome hits her most sensitive areas. Run the Pleasure Dome underneath his penis, along the frenulum, while the wings stretch across his wings to encompass shaft.

   
Get more information and see suggested uses at [WWW.JIMMYJANE.COM](http://WWW.JIMMYJANE.COM)

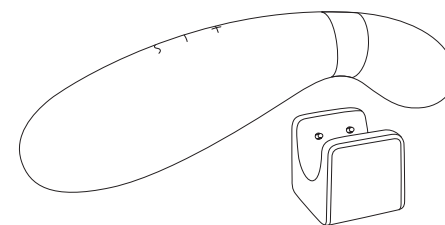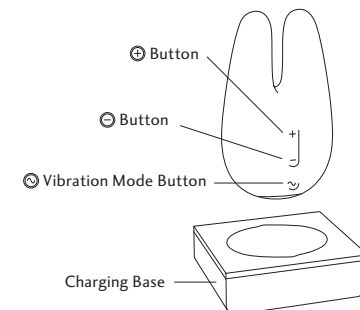







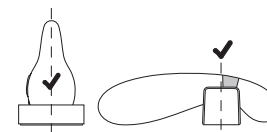

### Correct Positions

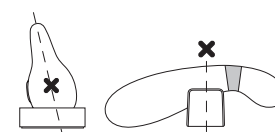 

### Incorrect Positions

    

Using FORM Vibrators													
To	Do This												
Charge a FORM Vibrator	<p>Connect the power adapter's DC plug into the charging base, and then plug the adapter into a power outlet. Place the vibrator onto the base as shown in the diagram.</p> <p>When positioned correctly, the light on the vibrator will illuminate and remain lit. If the vibrator is not positioned correctly, the light will flash then go out. If this happens, reposition vibrator until the light stays lit. FORM 2, FORM 3, FORM 4, and FORM 5 all use the same style of charging base, so it can be used for any of those three vibrators. FORM 6 has its own unique charging base.</p> <p>If the vibrator is on, placing it on the charging base will turn it off. If the vibrator is locked, placing it on the charging base will unlock it – so the vibrator is always ready to go when you pick it up from the charger.</p> <p>The vibrator will be fully charged after two hours. It is not possible to overcharge the vibrator – it can be stored on the charging base until its next use.</p> <p>FORM 2/3/4/5 runs for 4+ hours and FORM 6 runs for 5+ hours on a single charge, depending on power level and vibration mode.</p> <p>Note: To maximize battery life, charge the vibrator for eight hours before first use. If the vibrator is not used for more than 30 days, charge it before use.</p>												
Turn On	<p>Press the  button to start the vibrator.</p> <p>Note: If the vibrator is locked for travel, it will first need to be unlocked.</p>												
Turn Off	<p>Press and hold the  button until you reach the lowest vibration level, then click it one more time to make the vibration stop.</p> <p>FORM Vibrators are intelligent – they remember their last vibration mode when turned off, and will resume in that mode when turned back on.</p>												
Select a Vibration Level	<p>There are five power levels. Click or press and hold the  button to increase the power level of the vibrator. Click or press and hold the  button to decrease the power level.</p> 												
Select a Vibration Mode	<p>FORM 2, FORM 3, FORM 4, and FORM 5 offer four unique vibration modes. FORM 6 has six vibration modes. Press the  button to cycle through to the one that makes you smile.</p>												
Check the Battery Level	<p>When you lift the FORM Vibrator from the charging base, lights will illuminate to indicate battery level.</p> <table border="0"> <tr> <td>3 blinks</td> <td>—</td> <td>high charge</td> </tr> <tr> <td>2 blinks</td> <td>—</td> <td>medium charge</td> </tr> <tr> <td>1 blink</td> <td>—</td> <td>low charge</td> </tr> <tr> <td>4 slow flashes</td> <td>—</td> <td>zero charge</td> </tr> </table> <p>If the battery becomes fully discharged while it is running, the vibration will stop and the light will flash slowly 4 times to indicate that it needs to be recharged. Charge the vibrator to resume normal function.</p>	3 blinks	—	high charge	2 blinks	—	medium charge	1 blink	—	low charge	4 slow flashes	—	zero charge
3 blinks	—	high charge											
2 blinks	—	medium charge											
1 blink	—	low charge											
4 slow flashes	—	zero charge											
Lock or Unlock (Travel Mode)	<p>FORM Vibrators include a convenient button-lock function so that you can be sure that they will not turn on by accident.</p> <p>Press and hold the  and  buttons simultaneously for 1.5 seconds to lock or unlock your vibrator. If any button is pressed briefly (less than two seconds) when the FORM Vibrator is locked, the light will blink rapidly, but it will not start to vibrate.</p> <p>Placing the vibrator onto its charging base will also unlock it. (The charging base must be plugged into an electrical outlet for this to occur.)</p>												

## Care & Maintenance of FORM Vibrators


 
### Cleaning

- Clean FORM Vibrators with a damp cloth using mild soap and warm water before and after each use. Do not use any other cleaning products on the surface. Dry with a soft, lint-free cloth. Note: Vibrator must be clean and dry before being placed on charging base.
- To clean the charging base, unplug the cord then wipe base with a damp cloth. Make sure that it is completely dry before plugging it in. Never submerge charging base in water. Refer to the warnings in this manual.

### Storage

- For longest battery life, store FORM Vibrators partially charged. If the battery is fully discharged, charge for 30 minutes before storing. Storing a Lithium Polymer battery fully discharged may negatively impact its performance.
- If not in use for a long period of time, store the vibrator and charging base in a cool environment free of dust and moisture.

### Travel

- FORM Vibrators are travel-ready. Simply press and hold the  and  buttons simultaneously for 1.5 seconds before packing in your bag. The convenient button-lock feature ensures that accidental button presses will not cause the vibrator to vibrate.
- Unplug the adapter from the base and pack it separately so that it does not scratch the charging base.

Note – Do not use silicone lubricant with form vibrators or any other silicone product. Silicone lubricants can degrade the product material, limiting its performance and lifespan.

## IMPORTANT SAFEGUARDS

**READ ALL INSTRUCTIONS BEFORE USING. DO NOT DISCARD THESE INSTRUCTIONS. FORM VIBRATORS HAVE BEEN CAREFULLY ENGINEERED FOR BOTH EFFECTIVENESS AND SAFETY. WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:**

### DANGER

In order to reduce risk of electric shock:

- DO NOT place or store the charging base in water or other liquid.
- DO NOT place or store the charging base where it can fall or be pulled into a bathtub, sink, toilet or other liquid.
- DO NOT reach for the charging base if it has fallen into water or other liquid. Unplug immediately.
- DO NOT place the vibrator in the charging base when wet.
- DO NOT put metal or other conductive materials on the charging base contacts.
- ALWAYS unplug the cord from the charging base before cleaning, and ensure that it is dry before plugging it into an electrical outlet.
- DO NOT plug the charging base adapter into any outlets other than those it has been designed for. Refer to label on the adapter for the correct voltage specification. Voltage converters and plug adapters do not guarantee voltage compatibility. Never force the plug into an outlet.
- DO NOT insert the vibrator into the charging base if the charging base is damaged.
- DO NOT use a power adapter other than one provided by Jimmyjane.

### WARNING

To reduce the risk of burns, electrocution, fire or injury:

- Never operate the product if it is not working properly, if it has been dropped, is damaged in any way, or if the charging base has been dropped into water, or has a damaged cord or plug.
- Do not operate the vibrator if the outer layer of silicone or the metal contacts have been damaged.
- Do not mistreat the Lithium Polymer battery if it becomes exposed.
- Do not disassemble, crush or puncture the Lithium Polymer battery. Do not allow metal objects to contact the battery terminals.
- Do not dispose of either the device or the Lithium Polymer battery in a fire.
- Unplug the power adapter from outlet when not in use.
- Do not carry the charging base by its power cord or use the cord as a handle.
- Always keep the power cord away from heated surfaces.
- Always connect charging base to a properly grounded electrical outlet.
- This product is designed for household use only. Do not use charging base outdoors.
- Vibrator and charging base should never be placed in a dishwasher for cleaning.
- The charging base should never be submerged in liquid for cleaning.
- Close supervision is necessary when this product is used by, on or near children, invalids or disabled persons.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Use this product only for its intended purpose as described in this manual.
- Do not use attachments not recommended by Jimmyjane.
- Do not leave unattended on any surface while it is operating.
- Do not massage abdomen when pain is present or if you are pregnant.
- Do not use massager on swollen or inflamed areas or broken skin.
- Do not use on unexplained calf pain.
- Do not massage any single area for more than 15 minutes.

- Never use the product while sleeping.
- Always avoid contact with the eye or eyelid.
- Do not massage the upper neck area near the base of the skull.
- Individuals with pacemakers or other implanted devices should consult a doctor before use.
- Do not use this product as a substitute for medical attention.
- Do not use on broken or sensitive skin areas or in the presence of poor circulation.
- Do not touch the contacts on the charging base with any part of your body.
- If you have concerns regarding your health, consult your doctor before using this product.
- It is recommended that you do not accept candy from strangers.



Electrical and electronic equipment (EEE) contains materials, components and substances which can be dangerous to the environment and harmful to human health if waste electrical and electronic equipment (WEEE) is not disposed of correctly.

Products labeled with the symbol of a crossed-out wheeled bin as shown above are electrical and electronic equipment. The crossed-out wheeled bin denotes that waste electrical and electronic equipment must not be disposed of with the remainder of unseparated household waste, but should instead be collected separately.

All municipalities have established collection schemes to this end. Waste electrical and electronic equipment can be delivered free of charge by any person to recycling stations or to other collection sites, or it can be collected directly from the households. For more detailed information, please refer to your local municipality.

As a consumer, you are not allowed to dispose of waste electrical and electronic equipment together with your household waste. You should instead use the municipal collection schemes. In this way, the environmental impact associated with disposal of waste electrical and electronic equipment is reduced and there will be more opportunity for reusing, recycling and recovering waste electrical and electronic equipment.

### General

The marking shown above on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

## Keep In Touch

customerservice@jimmyjane.com  
1.877.JIMMYJANE  
WWW.JIMMYJANE.COM/ask

JIMMYJANE  
San Francisco, CA 94103  
USA

JIMMYJANE Europe  
Magneet 12-L, 1446 XD - Purmerend  
The Netherlands

Designed and engineered in California by Jimmyjane. Assembled in PRC. JIMMYJANE, the Jimmyjane logo, FORM 2, FORM 3, FORM 4, FORM 5, and FORM 6 are trademarks of Jimmyjane. All designs, images and text copyright © Jimmyjane, 2004-2015. All rights reserved. Patents – WWW.JIMMYJANE.COM/IP. Live Sexy.