

The Studio is P.E.S.'s own fetish showroom featuring items from around the world. We specialize in leather, latex, rubber, masks, bondage gear, restraints, whips, canes, floggers, and; of course; our own line of Erotic Electro Stimulation Devices. We look forward to seeing you.

We are located at
1507 West Oakey Blvd, Las Vegas, NV 89102
(on the SE corner of Western & Oakey)
Toll Free: (800) 339-6953 Phone: (702) 474-2991
Websites: www.peselectro.com
www.danteamore.com
www.thefetishboutique.com



Power Box XS



**Product Information
and Instruction Manual**

Welcome to the P.E.S. family. We hope that you enjoy your new P.E.S. product fully. To help you achieve that goal, we recommend that you read this manual. If you still have any questions after reading this manual, please do not hesitate to contact us.

Toll Free (US only): (800) 339-6953 Phone: (702) 474-2991

Fax: (702) 474-4088

Websites:

<http://www.peselectro.com>

<http://www.danteamore.com>

<http://www.thefetishboutique.com>

Email:

pesquestions@peselectro.com

Follow Us on Twitter:

<http://twitter.com/peselectro>

Like Us on Facebook:

<http://www.facebook.com/PES.Studio>

Join Our Community:

<http://www.estimfun.com>

Enjoy,
The Staff of P.E.S.

P.E.S. Power Box XS:



Includes:

- P.E.S. Power Box XS
- One pair of P.E.S. Pin to Pinch Adapters
- One pair of Pin Wire Leads
- One 12 volt 1.5Amp A/C Adapter

Instructions for the P.E.S. Power Box XS:

To properly experience the effects of Erotic Electro Stimulation, you need to learn how to properly operate your P.E.S. Power Box XS. A little reading, experimentation, and practice are all it takes to have a pleasurable experience. Here are the steps to follow each time you use your P.E.S. Power Box XS:

1. Start by making sure the On/Off switch on the left side of your P.E.S.



Power Box XS is in the Off/Down position.

2. Attach the Leads to the Electrode(s) you are planning to use. (Note: Instructions for Low Profile Connector application is on page 6.)



3. Plug the 3.5mm jack on the end of your Pin Wire Leads into the Lead Plug-In (located on the top edge of your P.E.S. Power Box XS).

7. Lubricate the Electrode(s) & the area of the body to which you will be applying. Apply the Electrode(s) to your body according to the instructions for each Electrode.

4. For maximum power, use the included 12 volt 1.5Amp A/C Adapter to power your P.E.S. Power Box XS. The inlet for the A/C Adapter is on the left side of the Power Box below the On/Off switch.



(Note: A 9v battery can be used instead of the included A/C Adapter.)

5. Check the controls on the face of the P.E.S. Power Box XS. There are three knobs on the face of the unit: Intensity (top middle), Pulse (bottom left), and Frequency (bottom right).



6. All three knobs should be turned completely to the left/counter-clockwise (as you look at the face of the box while holding it.)

8. Once you have applied your chosen Electrode(s) and checked the power settings on your Power Box, turn on your Power Box by switching the On/Off switch to the On/Up position. The Green LED indicators on the face of the Power Box will light up solid and the Red LED indicators will be flickering.



IMPORTANT SAFETY NOTE: ALWAYS REMEMBER TO LOWER THE POWER LEVEL AND TURN OFF THE P.E.S. POWER BOX EACH TIME YOU ADJUST, REMOVE, OR REINSERT ANY ELECTRODE.

9. With the switch in the On/Up position, slowly turn the Intensity clockwise to a comfortable level.



When you have found the Intensity setting you like best, move on to the Frequency and Pulse knobs.

For safety reasons, the P.E.S. Power Box XS and its accompanying electrodes are to be used below the waist only. We also recommend that only one person be attached to the P.E.S. Power Box XS at any one time.

10. The Frequency specifically affects the erotic nerve bundles you are stimulating. With the Frequency knob turned all the way to the left, you will feel a high level of tingling. As you rotate the knob clockwise, the sensation will change to a deeper, rumbling throb.




One way to understand this effect is to think of it as the treble/bass controls on your stereo. You will most likely find the higher frequency settings more pleasurable and the lower settings will feel sharper.

11. With the Pulse knob turned all the way to the left, a constant stimulation can be felt through the conductive surfaces. As you turn the knob clockwise, you will notice a delay in the sensation, as indicated by the blinking LED lights. The further clockwise the Pulse is set, the longer the delay.



The mind/body will tend to find a faster pulse setting more pleasurable and a lower pulse settings will feel harsher.

P.E.S. Power Box XS Layout:

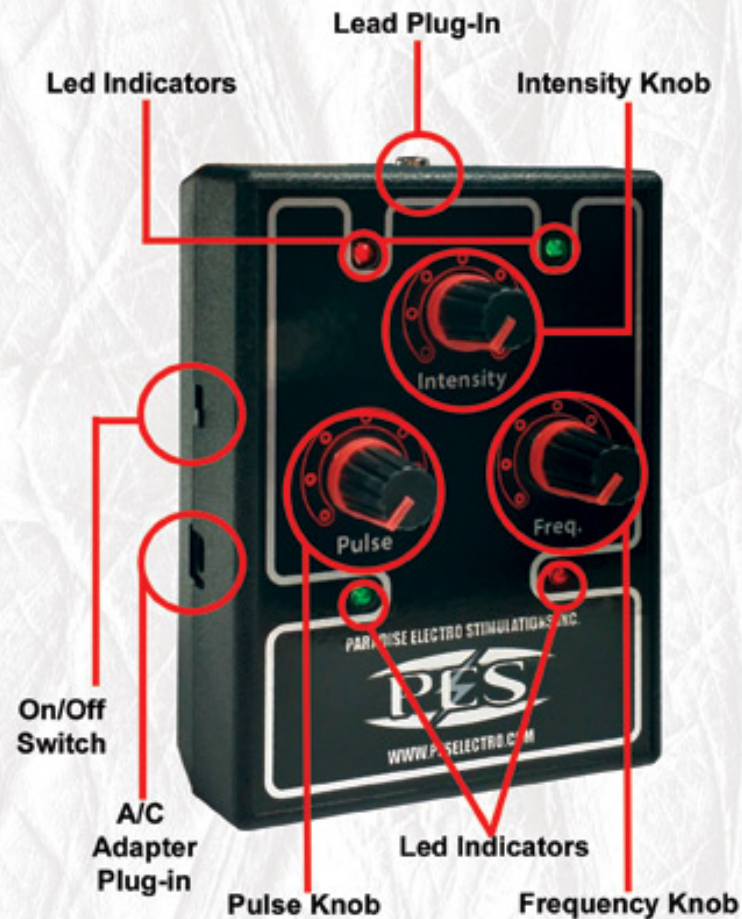


P.E.S. Low Profile Connectors:

Proper application/removal of your P.E.S. Low Profile Connectors:

1. Hold a Low Profile Connector between the thumb and forefinger, making sure that the metal contacts are at the bottom side of the Low Profile Connector closest to the electrode.
2. Position the Low Profile Connector against the head of the snap post. Lightly compress (pinch) the outside edges to open the contacts while exerting a slight downward motion. The Low Profile Connector will easily engage and be securely fastened.
3. For removal, perform the reverse procedure by compressing (pinching) the outside edges of the Low Profile Connector and removing with a slight upward motion.

Note: DO NOT attempt to apply the Low Profile Connector by force or to remove the Low Profile Adapter by pulling on the lead wire. This will lead to failure of the Low Profile Connectors.

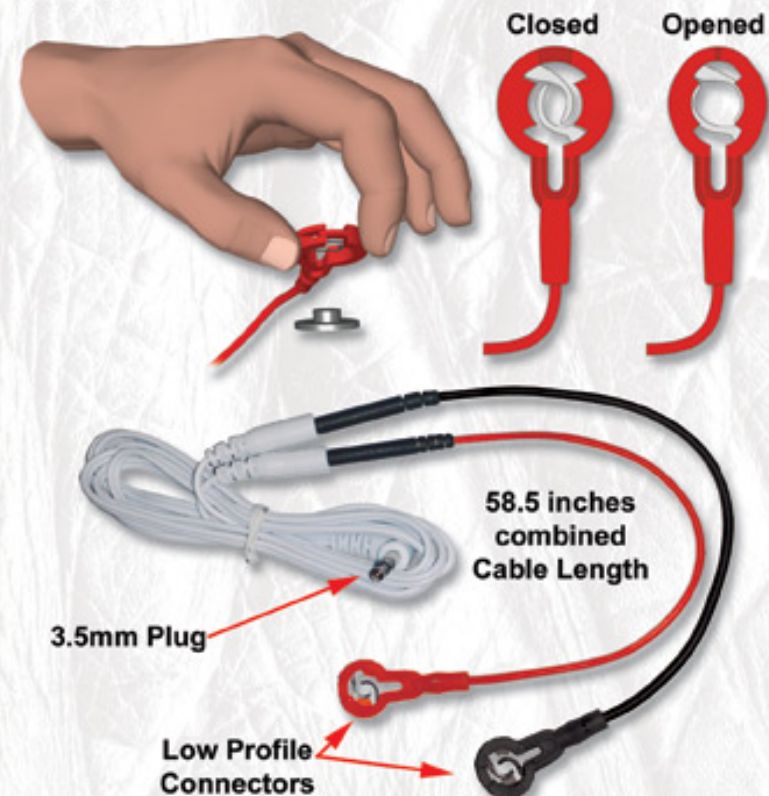

Glossary of Erotic Electro Stimulation Terms

Definitions of basic phrases and terms related to Electro Stimulation (EES)

EROTIC ELECTRO STIMULATION

This is the use of low frequency electrical impulses from a generating source delivered to an electrode or electrodes to enhance an individual's natural sexual response. It is also referred to as estim, electro sex, electro stim, electrical stimulation, or EES.

GENERATING SOURCE

This is the power source for the erotic electro stimulation also known as a power box, e.g. The P.E.S. Power Box XS. It controls the low frequency electrical impulses being delivered to the body via the Electrode(s). Some use Made-For-Play boxes, TENS units, or other NMES-style units.

ELECTRODE(S)

This is the device through which the Erotic Electro Stimulation is delivered to the body. They are typically comprised of conductive and non-conductive areas out of various conductive materials. These come in single, double, triple, or quadruple pole versions.

Electrodes are the cock rings, anal plugs, self-adhesive pads, dildos, or other forms containing the conductive surfaces that are applied to the erogenous zones.

A single pole electrode requires a second electrode be used in circuit with it in order to function.

CONFIGURATION(S)

This is a combination of what electrodes are being used and their placement on the body's erogenous zones for maximum efficacy.

LEADS

These are the wires that connect your Electrodes in circuit and plug into your power box. With the P.E.S. Product line, this is usually a pair of Low Profile Leads, but can also mean a pair of Pin Wire Leads with (or without) a Pin to Pinch Adapter on them.

CONNECTOR(S)

This is the end of your lead that attaches to the Electrode. There are two on each pair of Leads. Both of them need to be connected in order to create a complete circuit.

CONNECTION POINT(S)

The point on the Electrode where the Leads are attached. There are either one, two, three, or four of these on an Electrode, depending on whether it is single, double, triple or quadruple pole.

FULL CONTACT

An important part of successful Erotic Electro Stimulation is CONTACT. In regards to all electrodes, whenever a space is created between the electrode and the contact area (skin or muscle tissue), electricity will arc over that space. This creates a slight "zapping" sensation that can be uncomfortable, and very undesirable for some users.

HOT SPOTS

Occasionally, you will read cautions about how to prevent 'Hot Spots'. These unpleasant sensations are caused by too little lubrication, unshaven pubic hair, contact with metal (such as jewelry), or by not achieving full contact between the electrode and the skin.

'Hot Spots' may not occur under all of these conditions for everyone. If you experience a 'Hot Spot', read your directions pertaining to the electrode in use, and the problem should easily be made clear, and solved with one or two simple corrections in use.

HFO

This is the abbreviation for 'Hands-Free Orgasm', which is an orgasm where no physical contact from your hands or someone else's hands is needed with the genitals in order to achieve climax. With electro stimulation, it is an orgasm achieved by electrode placement combined with the settings of your generating source and no manual or oral manipulation of the genitals.

More information can found on the P.E.S. website:

[HTTPS://WWW.PESELECTRO.COM](https://www.peselectro.com)

under the 'INFORMATION' links at the bottom of the Home Page.

Specifically under the
'PRODUCT SAFETY & INFORMATION LINKS'.



The power of two in one...

Two Power Boxes are used in conjunction with Stanley (a massive Quad Pole Acrylic Vaginal/Anal Plug Electrode) to provide the ultimate stimulation experience. Electrode and Power Boxes are sold separately.

Safety and Warranty Information – Please Read Carefully!

The safety of our customers has always been of primary concern to Paradise Electro Stimulation, Inc. In that regard, here are the primary safety considerations for users of the P.E.S. Power Box XS with its various electrodes.

Electrical Safety:

- **NEVER** use any P.E.S. Electrodes or the P.E.S. Power Box XS above the waist.
- P.E.S., Inc. recommends that the **Intensity** knob be turned all the way to the left (as you are looking at the box) and the P.E.S. Power Box XS be turned off before adjusting, removing or reinserting any P.E.S. Electrode. This prevents the rapid depolarization of the nerve endings. (Rapid depolarization feels like a shock and you need to avoid this with any form of Erotic Electro Stimulation.)
- **IF CONTACT BETWEEN THE ELECTRODE AND BODY IS LOST AT ANY TIME, IMMEDIATELY TURN OFF THE P.E.S. POWER BOX XS BEFORE REAPPLYING OR REINSERTING THE ELECTRODE.**
- P.E.S., Inc. products are specifically designed and engineered to work exclusively with P.E.S., Inc. technology/products to optimize the Erotic Electro Stimulation effect safely and effectively.
- There should only be one person connected to the P.E.S. Power Box XS at any one time.
- **Do not use these devices if any of the following applies:** you have a pacemaker; you have a history of heart problems; you are prone to epileptic seizures; you have a penile prosthesis; fever is present; if you have any internal or external injuries; if you have any inflamed or swollen areas; if you have skin lacerations or open wounds; or you are pregnant. Do not apply directly to any body piercing. If you have any further medical concerns, please ask your physician. Do not use this device if your physician has advised against the use of low frequency electro stimulation.
- Do not use in or near water.

Cleaning and Care of your P.E.S. Power Box XS and Electrodes:

Do not use any solvents to clean the P.E.S. Power Box XS. Using a damp cloth or towel will suffice. You may clean your P.E.S. Electrodes with a solution of 10% household bleach and 90% water with a few drops of mild dishwashing liquid added. Do not soak. For additional disinfection, use a product like **Swiss Navy Toy & Body Cleaner** after washing with soap and water. Do not use Isopropyl Alcohol on any of the clear Acrylic vaginal or anal products.

Lubrication:

P.E.S. Inc. recommends the use of a proper lubricant with all P.E.S. Electrodes. A good lubricant not only lubricates, but also can decrease the possibility of hot spots. P.E.S. ElectroLube not only lubricates, but also has conductive properties and can increase the strength of the **Erotic Electro Stimulation** by as much as 40% by lowering the skin's resistance. You can also adjust and balance the **Erotic Electro Stimulation** by increasing the conductivity of a particular electrode or an area of that electrode by simply applying more P.E.S. ElectroLube to the skin beneath. For urethral devices, such as the Sparkler, Big Boy Sparkler, Deep Throat Slim Jim, Deep Throat Big Jim, and the Corona Stimulator with Urethral Amplifier, we strongly recommend the use of **Sterile Lubricating Jelly**. Water-based lubricants, such as Sterile Lubricating Jelly, can be used as an alternative if you do not have a conductive lubricant, such as P.E.S. ElectroLube.

Note: DO NOT use any silicone-based lubricants. Silicone is an insulator and, thus, reduces the conductivity of the Electrode. With Electro-Flex™ products silicone-based lubricants may cause permanent damage to the Electrode. Glycerin-based or mineral oil-based lubricants should also be avoided because they tend to dry out rapidly and become sticky and can thus decrease the sensations of the Erotic Electro Stimulation.

Overseas 220 volt A/C Adapter (supplied by P.E.S., Inc.)

The P.E.S. Power Box XS is manufactured to operate on a standardized U.S. electrical current. It can be powered with a 9 volt battery but an A/C Adapter gives greater and more consistent power. In order for Overseas Customers to operate the P.E.S. Power Box XS properly, P.E.S. has invested in an A/C Adapter that will work universally. This 12 volt 1.5Amp adapter is rated for input of 100 volts to 240 volts 50/60Hz .4Amp. It is center pole positive and works in the U.S. as well as overseas. It comes with blades for plugging into wall outlets in North America or the EU, so customers outside of those areas will need to purchase the correct blade adapter for the wall outlets in their country (not supplied by P.E.S.).

P.E.S., Inc., is not responsible for the misuse of the adapter and voltage guidelines set forth in this notice. The P.E.S. supplied A/C Adapter is available for purchase on the chance a replacement is needed. In the event these guidelines are violated, all warranties on the P.E.S. Power Box XS will be null and void.

WARNING:

THESE PRODUCTS ARE FOR ADULT NOVELTY USE ONLY. THERE ARE NO IMPLIED MEDICAL CLAIMS WARRANTED OR IMPLIED BY THE USE OF THIS PRODUCT.

Liability:

Paradise Electro Stimulation, Inc. will not be liable for any damage, mishap, or injury resulting from the use of P.E.S. products. By using our products, you acknowledge that you have read the safety information contained herein, and the directions for use of these devices, and you accept responsibility and liability for your actions.

Warranty:

Due to the personal nature of the products and for hygienic reasons, there are no returns or refunds on any of the Electrodes.

We offer a 30-day warranty on all products against manufacture defect. In the event of a defect, you must contact us by email: pesquestions@peselectro.com or phone: 702-474-2991 (or 800-339-6953 -US only) for a return authorization number. Any product received without an RA# included on the mailing label will be returned unopened. Repair/replacement is available beyond the warranty period but there may be charges.

Note: Any product shipped/returned for evaluation **MUST** be cleaned and disinfected thoroughly before being sent in to us. Thank you for your consideration.

Within the first thirty days the P.E.S. Power Box XS, only, may be returned for a full refund minus a 15% restocking fee. You must return the Power Box, AC Adapter, and Leads (1 pair of Pin Wire Leads & 1 pair of Pin to Pinch Adapters). This refund applies only to the P.E.S. Power Box XS. **No Refunds, Returns, or Exchanges will be accepted on P.E.S. Electrodes or accessories.**

Note: P.E.S., Inc. products are specifically designed and engineered to work exclusively with P.E.S., Inc. technology/products to optimize their function and safety. **Use of P.E.S. Electrodes, Power Boxes, or leads with power supplies, electrodes, or leads other than P.E.S. Electrodes, Power Boxes, or leads may damage these devices, cause injury, and will void all warranties, expressed or implied.**

Copyright © 2015

The contents of this manual, including all pictures and text are copyrighted, and the sole property of Paradise Electro Stimulation, Inc. and may not be reproduced without the written permission of Paradise Electro Stimulation, Inc.